


Disposal of gas spring

When gas springs are no longer needed, they should be disposed of in an environmentally correct manner. To accomplish this, they should be drilled open, the compressed nitrogen gas released and the oil drained, showed as below:

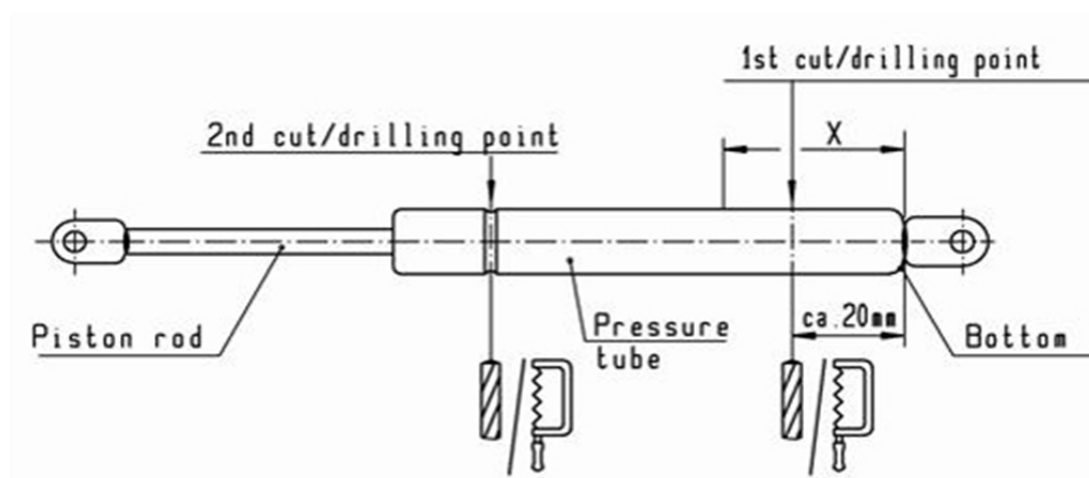

1. First saw cut/drilling point : Saw or drill the pressure tube open about 20 mm from bottom.
2. Second saw cut/drilling point : Saw or drill the pressure tube open in the groove.

廢棄氮氣缸處理方法與步驟：

如上圖所示

1. 距氮氣缸管身底部 20mm 處將管身鋸開或鑽孔；
2. 將管身凹槽部鋸開或鑽孔。